

# Welcome

## Start Guide



REVL 4+



 
**T-Mobile™**  
**REVL 4+**

P10000276

CJB2FF0TBAAA

## At a glance

Let's get started. We'll guide you through startup and tell you where to find more information about your phone and its great features.

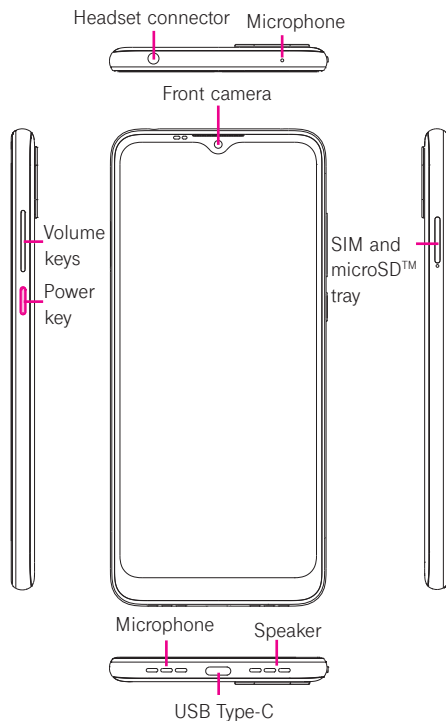


## Set up your SIM card


The SIM (Subscriber Identity Module) card identifies your device to the wireless network. You can't make or receive phone calls without a properly installed SIM card unless it's an emergency call (911).

You don't need to power off your device before inserting or removing the SIM card.

 **Note:** Your device only supports Nano SIM cards. To avoid damage to your device, do not attempt to insert any other SIM types.

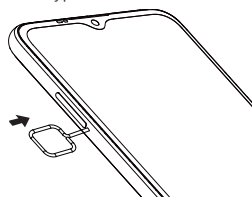

 Insert the SIM pin that's provided to eject the SIM tray and then slide it out gently.

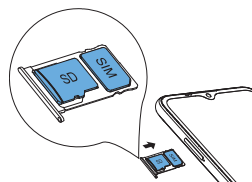


Place or remove the Nano SIM card and the microSD™ card in the correct slot as shown.

**Note:** SIM pin is included in the box. microSD™ cards are sold separately.

## Battery

 To optimize battery performance, be sure to fully charge your device before using it for the first time.

### Charging the device

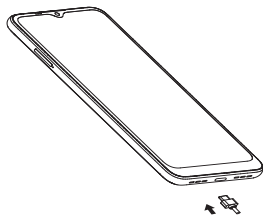




1. Insert the USB Type-C cable into the charge port as shown.
2. Connect charger to power outlet.

**Note:** Please use the charger and USB Type-C cable that came with your device. Using the wrong cable and charger may damage the charging port or reduce battery performance.

## Optimize Battery Life


To optimize battery life, adjust your screen brightness and display timeout.

 
1. **Adjusting brightness level:** Lowering your screen brightness level can optimize your battery level. To adjust the brightness level, from the Home screen, touch **Settings**  **> Display > Brightness level**. To lower the brightness level, move the wheel to the left.
2. **Power saving mode:** Power saving mode minimizes battery usage to extend battery life. To explore power management options, from the Home screen touch **Settings**  **> Battery > Battery saver**. Then touch **TURN ON NOW** to activate power saving mode.
3. **Adjust screen timeout:** Sleep mode is low power mode function and it significantly saves your battery power. Lower the amount of time your device stays on after you stop using it to optimize your battery level. To do so, from the Home screen, touch  **> Display > Advanced > Screen timeout** and select screen timeout duration.

## Security & convenience

To secure your phone from being used by others without your permission, activate the following security options:

**Fingerprint and screen lock:** Swipe up from the Home screen and touch **Settings**  > **Security** > **Screen lock**.

**Face unlock:** Swipe up from the Home screen and touch **Settings**  > **Security** > **Face key** and follow the instructions to set up face key.

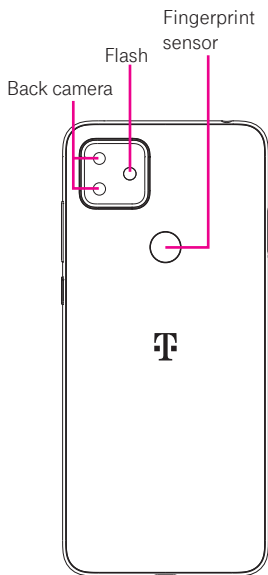

## Useful apps

When you're up and running, try these apps to see what you can do with your new phone.

**Find it:** Swipe up from the home screen to see all your apps.



### Camera

Your mobile phone is equipped with a camera and a camcorder for taking photos and shooting videos.



### Chrome

Using the Chrome browser, you can enjoy surfing the Web.



### Gmail

With Gmail, you can send and receive emails, manage emails by labels, archive them, etc.



### Messages

You can create, edit, and receive SMS and MMS with this phone.



### Play Store

In Play Store, search for the app you need, download it and then follow the installation guide to install the app.



### Settings

To access this function, swipe up from the Home screen and then touch Settings.

**Note:** Software updates happen frequently, so your phone may not have all the listed apps or features.


## Approved firmware versions

This device will only operate with firmware versions that have been approved for use by your wireless carrier and the device manufacturer. If unauthorized firmware is placed on the device it will not function.

## Information about safeguarding handsets

We encourage customers to take appropriate measures to secure their devices and invites them to take advantage of the features available on this device to help secure it from theft and/or other unauthorized access and use. This device has a locking function (e.g., Security PINs) that can serve as a first line of defense against unauthorized use or access to stored information. Preloaded security applications that allow customers to track or locate misplaced devices can be found on several devices. Lost or stolen devices should be immediately reported to your wireless carrier so that proper measures can be taken to protect accounts. For additional information, visit your wireless carrier's Privacy Policy.

## Emergency call

If your phone has network coverage, dial the emergency number and touch  to make an emergency call. This works even without a SIM card and without typing the PIN code.

Although all phones are equipped with 9-1-1 emergency calling, this phone may or may not permit its location to be approximated during a 9-1-1 call. Be prepared to report your location when dialing 911\*.

\* Availability of this feature depends on upgrades to the (a) wireless network and (b) 9-1-1 calling system that are required to be installed by the local 9-1-1 response agency or public safety answering point (PSAP); these upgrades may not be available everywhere within our wireless coverage area or your roaming area. This approximation of the phone's location and the transmittal of location information are subject to emergency situations, transmission limits, network problems/limitations, interconnecting carrier problems, your phone, buildings/tunnels, signal strength and atmospheric/topographical conditions, and may be curtailed, interrupted, dropped, or refused. The phone's approximate location is transmitted to the local 9-1-1 response agency or PSAP while the call is in progress; this approximation is intended solely to aid the PSAP in dispatching emergency assistance or to limit the search area for emergency services personnel. You should not rely solely on a mobile phone for essential communications (such as a medical or other emergency). Please see your wireless carrier's Terms and Conditions, and Privacy Policy for additional service restrictions and details.



## Additional information

Use of some content or features may require qualifying service, or access to a Wi-Fi connection.

Devices and screen images are simulated. **Coverage** not available in some areas. See **Terms and Conditions (including arbitration provision)** at T-Mobile.com, Sprint.com or MetrobyT-Mobile.com, for rate plan information, charges for features and services, and restrictions and details.

The Bluetooth® word mark and logo are owned by Bluetooth SIG, Inc. and are used by T-Mobile under license. T-Mobile and the magenta color are registered trademarks of Deutsche Telekom AG ©2020 T-Mobile USA, Inc.

